


1) From outside of form, align left edge of bracket to the left edge of the notch.

2) Once the bracket is aligned to the form, use the drill jig to drill a 7/32" hole through the form board.

Correct Hole

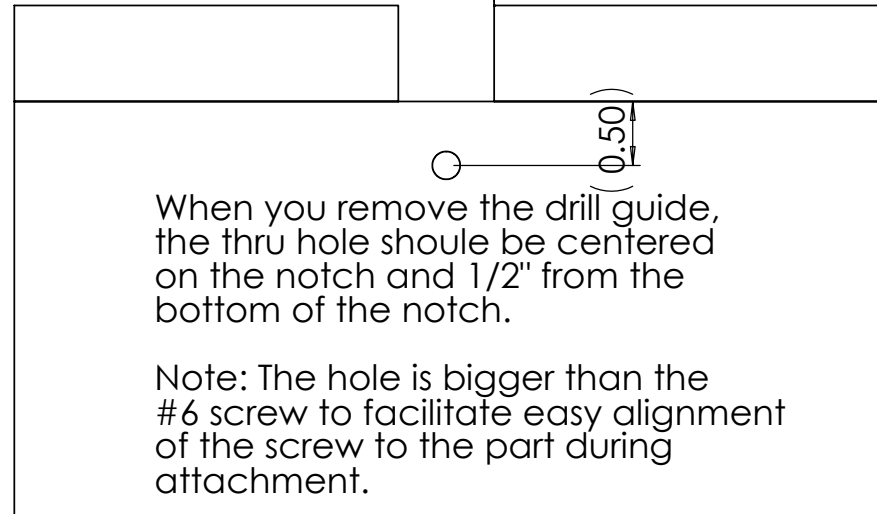

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	INTELLICEPT, CA USA		
	FI Series REV B Drill Jig Alignment		
MATERIAL	SCALE		CAD FILE:
FINISH			SHEET