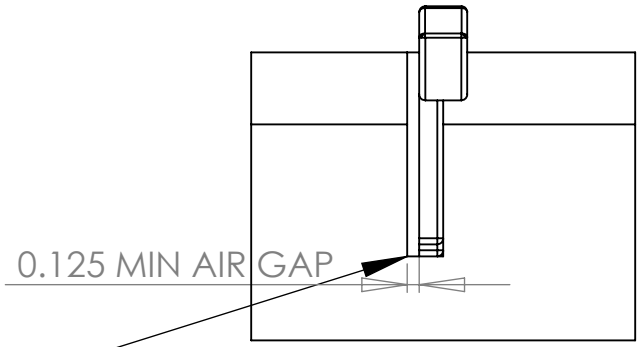

Saw cut width should be at least 1/8" greater than part. Part should slide into cut without the use of force.

Saw cut for insert should be sufficient in length to fit appropriate part. We recommend keeping cut length no more than required to fully insert the part.

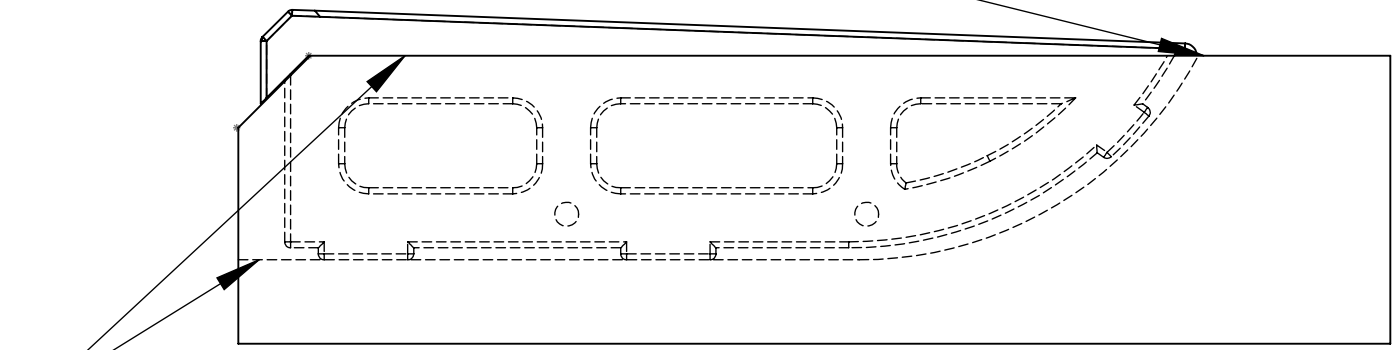

Saw cut for insert should be sufficient depth such that the exposed portion part fully sets on the wall surface.

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTELLICEPT. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF INTELLICEPT IS PROHIBITED.

MATERIAL

FINISH

TITLE:

SAW CUT SETUP

SIZE	DWG. NO.	REV
A	CutInDetailA	

SCALE: 1:5 | WEIGHT:1.74 lbs | SHEET 1 OF 1

5 4 3 2 1