THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Intellicept. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF Intellicept IS PROHIBITED.

Layout the parts at approximately 18" from the end points (NOTE: measure from the inside of the form to account for the thickness of the form board). Then divide the distance between the end points into equal increments to define the center spacing (target 28-42" centers).

This example shows a typical box. Note that each part starts 18" from the corner, but the distance between parts may change from one wall segment to another (28" vs 36") - this is normal. If you keep the center distances the same (ie 36"), then the distances to the corners would vary (this would leave a less desirable looking layout, as your eye will always use the corners as a reference point of symmetry).

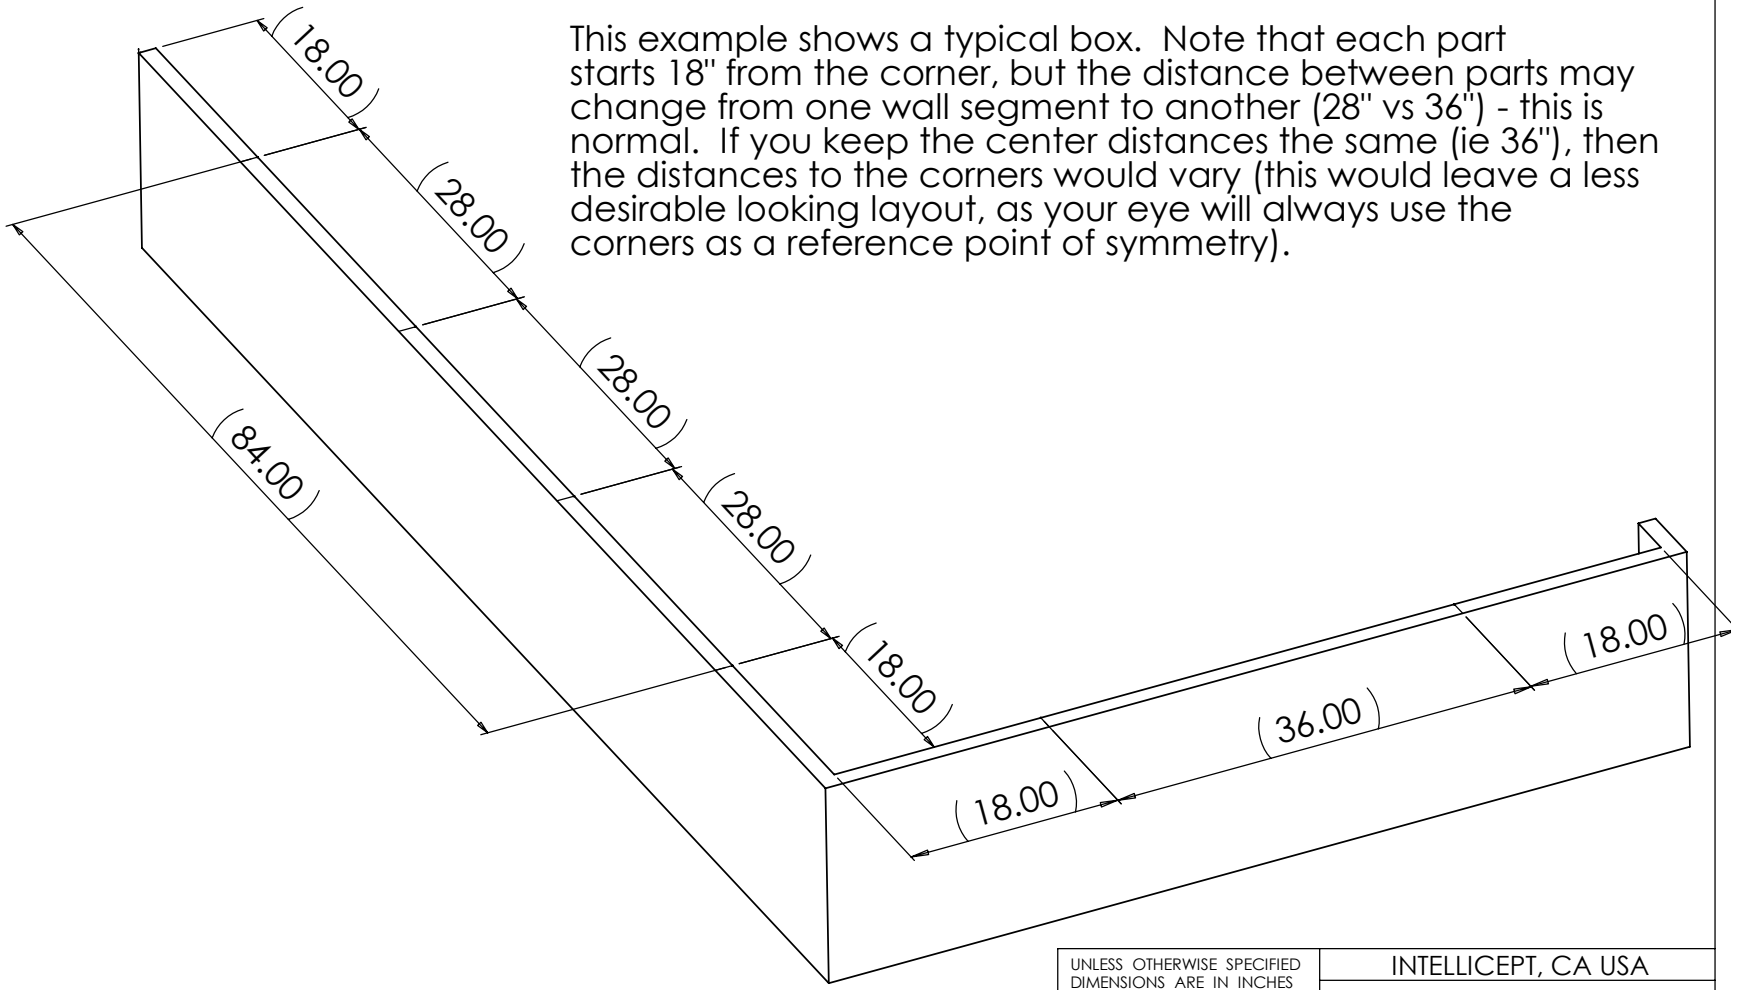

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	INTELLICEPT, CA USA
	FI Series Layout
MATERIAL	
FINISH	
	SCALE / CAD FILE: / SHEET